




DBLink4.0



With the 4.0 option, the DBLink system connects the **crane** to the **world**.

In fact, it is remotely possible to:

- see the same screen as the operator, therefore all the DBLink sensors informations
- access automatic Reports and generate specific ones
- enable or disable the erecting program
- check the GPS position of the machine
- limit the usage permit by time bands
- access the diagnosis page
- limit the crane tm capacity

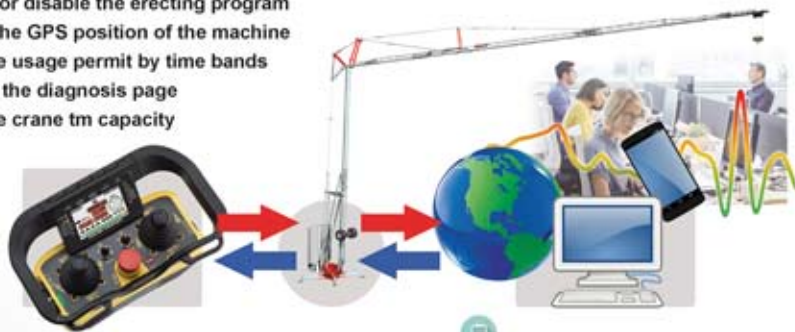

All this is transformed into **safety** and **efficiency**, both for the user and for those who manage rental fleets.

Assistance is **faster** and **cheaper**, machine downtimes are shorter, control is **easier** and, when necessary, can intervene by blocking the machine.

The **Reports**, which can be differentiated by user and renter, contain **information on the work** of the crane, on the tons handled for example, on the frequency of intervention of the safety devices, on the number of alarms, on the geographical position, on the work start and end times. Consultation of the reports and **graphs** that are automatically generated makes it possible to measure the actual **exploitation** of the crane, with obvious advantage in terms of **preventive maintenance**.

DBLink 4.0 is available on the complete range of DALBE and Sky Cranes machines, starting with DB 20 type.

